



—
your partner
in sensor
technology.



User Manual EE850

CO₂ and Temperature Sensor
for Duct Mounting



Content

1	General Information	3
1.1	Explanation of Warning Notices and Symbols	3
1.2	Safety Instructions	4
1.2.1.	General Safety Instructions	4
1.2.2.	Intended Use	4
1.2.3.	Mounting, Start-up and Operation	4
1.3	Environmental Aspects	5
2	Scope of Supply	5
3	Product Description	6
4	Mounting and Installation	6
5	Electrical Connection	8
6	Setup and Configuration	9
6.1	Product Configuration	9
6.1.1.	EE850 Configuration using HA011070	9
6.1.2.	EE850 Configuration using legacy USB configuration adapter HA011066	9
6.2	PCS10 Product Configuration Software	11
6.3	RS485 Digital Interface	11
6.3.1.	Hardware Bus Termination	11
6.3.2.	Device Address	12
6.3.3.	BACnet Protocol Settings	12
6.3.4.	Modbus RTU Protocol Settings	13
6.4	Modbus Register Map	14
6.5	Modbus RTU Example	15
7	Maintenance and Service	16
7.1	Calibration and Adjustment	16
7.1.1.	Definitions	16
7.1.2.	CO ₂ and T Calibration and Adjustment	16
7.1.3.	Calibration and Adjustment at E+E Elektronik	16
7.1.4.	Calibration and Adjustment by the User	16
7.2	Repairs	17
8	Accessories	17
9	Technical Data	18
10	Conformity	20
10.1	Declarations of Conformity	20
10.2	Electromagnetic Compatibility	20
10.3	FCC Part 15 Compliance Statement	20
10.4	ICES-003 Compliance Statement	20

1 General Information

This user manual is intended to ensure proper handling and optimal functioning of the device. The user manual shall be read before commissioning the equipment and it shall be provided to all staff involved in transport, installation, operation, maintenance and repair. E+E Elektronik Ges.m.b.H. accepts no liability for any warranty or liability claims arising from this publication or improper handling of the product(s) described.

All information, technical data and diagrams included in this document are based on the information available at the time of writing. The document may contain technical inaccuracies and typographical errors. The contents will be revised on a regular basis and changes will be implemented in subsequent versions. The product(s) described and the contents of this document may be changed or improved at any time without prior notice.

All rights are reserved by E+E Elektronik Ges.m.b.H. No part of this document may be reproduced, published or publicly displayed in any form or by any means, nor may its contents be modified, translated, adapted, sold or disclosed to a third party without prior written permission of E+E Elektronik Ges.m.b.H.

PLEASE NOTE

Find this document and further product information on our website at www.epluse.com/ee850.

1.1 Explanation of Warning Notices and Symbols

Safety precautions

Precautionary statements warn of hazards in handling the device and provide information on their prevention. The safety instruction labeling is classified by hazard severity and is divided into the following groups:

DANGER

Danger indicates hazards for persons. If the safety instruction marked in this way is not followed, the hazard will very likely result in severe injury or death.

WARNING

Warning indicates hazards for persons. If the safety instruction marked in this way is not followed, there is a risk of injury or death.

CAUTION

Caution indicates hazards for persons. If the safety instruction marked in this way is not followed, minor or moderate injuries may occur.

NOTICE

Notice signals danger to objects or data. If the notice is not observed, damage to property or data may occur.

Informative notes

Informative notes provide important information that is characterised by its relevance.

INFO

The information symbol indicates tips on handling the device or provides additional information on it. This information is useful to achieve optimum performance of the device.

The title field may deviate from "INFO" depending on the context. For instance, it may also read "PLEASE NOTE".

1.2 Safety Instructions

1.2.1. General Safety Instructions

NOTICE

Improper handling of the device may result in its damage.

- The EE850 enclosure, the sensing probe and the sensing module shall not be exposed to unnecessary mechanical stress.
- The device shall not be exposed to extreme thermal stress.
- Use the EE850 only as intended and observe all technical specifications.

1.2.2. Intended Use

The EE850 is intended for CO₂ and temperature (T) measurement in ducts. Its typical application is in demand controlled ventilation and building automation. Due to its wide measuring ranges and its insensitiveness to pollution, the EE850 can be employed in demanding climate and process control as well.

WARNING

Non-compliance with the product documentation may cause safety risks for people and the entire measurement installation.

The manufacturer is not liable for any damage caused by improper handling, installation and maintenance of the device.

- Do not use EE850 in explosive atmosphere or for measurement in aggressive gases.
- This device is not appropriate for safety, emergency stop or other critical applications where device malfunction or failure could cause injury to human beings.
- The device may not be manipulated with tools other than specifically described in this manual.

NOTICE

Failure to follow the instructions in this user manual may lead to measurement inaccuracy and device failures.

- The EE850 may only be operated under the conditions defined in chapter 9 Technical Data. Otherwise, measurement inaccuracies may occur and device failures cannot be ruled out.
- The steps recommended by the manufacturer for installation, inspections and maintenance work must be observed and carried out for the safety of the user and for the functionality of the equipment.
- Any unauthorised product modifications will invalidate all warranty claims. Modifications may only be carried out with express authorisation of E+E Elektronik Ges.m.b.H.!

1.2.3. Mounting, Start-up and Operation

The EE850 duct sensor has been produced under state of the art manufacturing conditions, has been thoroughly tested and has left the factory after fulfilling all safety criteria. The manufacturer has taken all precautions to ensure safe operation of the device. The device shall be set up and installed in a way that does not impair its safe use. All applicable local and international safety guidelines for safe installation and operation of the device have to be observed. This user manual contains information and warnings that must be observed in order to ensure safe operation.

PLEASE NOTE

The manufacturer or his authorised agent can only be held liable in case of willful or gross negligence. In any case, the scope of liability is limited to the corresponding amount of the order issued to the manufacturer. The manufacturer assumes no liability for damage caused by non-compliance with the applicable regulations, operating instructions or the specified operating conditions. Any consequential damage is excluded from liability.

This manual contains information and notes of caution, which have to be followed by the user to assure safe operation.

⚠ WARNING

Non-compliance with the product documentation may result in accidents, personal injury or property damage.

- Mounting, installation, commissioning, start-up, operation and maintenance of the device may only be carried out by qualified staff. Such staff must be authorised by the operator of the facility to carry out the mentioned activities.
- The qualified staff must have read and understood this user manual and must follow the instructions contained within. The manufacturer accepts no responsibility for non-compliance with instructions, recommendations and warnings.
- All process and electrical connections must be thoroughly checked by authorised staff before commissioning the device.
- Do not install or start-up a device suspected to be faulty. Mark it clearly as faulty and remove it from the process.
- Service operations other than described in this user manual may only be performed by the manufacturer. A faulty device may only be investigated and possibly repaired by qualified, trained and authorised staff. If the fault cannot be fixed, the device shall be removed from the process.

1.3 Environmental Aspects

i PLEASE NOTE

Products from E+E Elektronik Ges.m.b.H. are developed and manufactured in compliance with all relevant environmental protection requirements. Please observe local regulations for the disposal of the device.



For disposal, the individual components of the device must be separated according to local recycling regulations. The electronics shall be disposed of correctly as electronics waste.

2 Scope of Supply

- EE850 sensor
- Cable gland
- Mounting set with flange
- Test report according to DIN EN10204-2.2
- Quick guide (for digital version)

3 Product Description


The EE850 CO₂ sensor accurately measures CO₂ and temperature (T) in demand controlled ventilation, process control and building automation. Measuring ranges are up to 10 000 ppm (CO₂) and -20...+60 °C (-4...+140 °F) (T).

The sensor is available with two probe lengths and analogue and digital outputs. The analogue current or voltage outputs provide the measured values.


The EE850 can be configured with the PCS10 Product Configuration Software. For details, please refer to chapter 6 Setup and Configuration.

4 Mounting and Installation


Values in mm (inch)

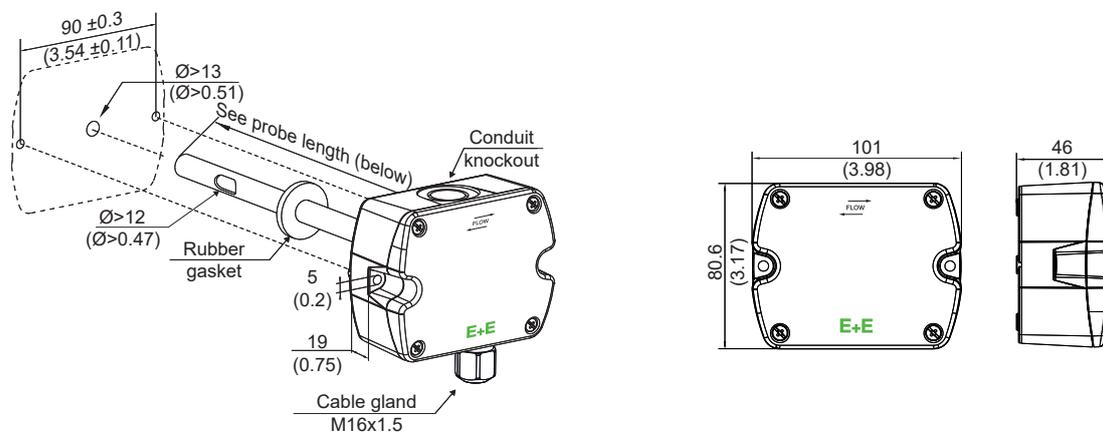


Probe length L50 Model M10

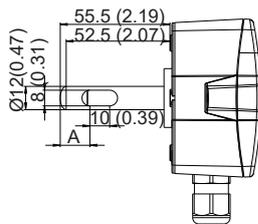

Probe length L200 Model M10, M11

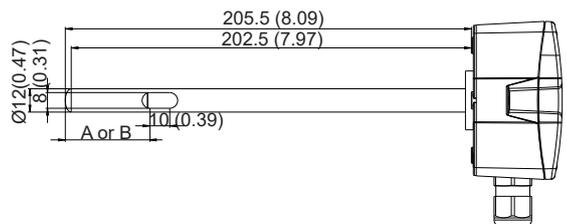

Mounting flange (Included in the scope of supply)

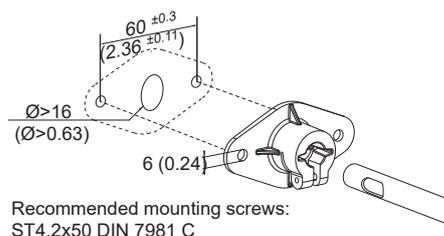

Model	Distance to the air inlet	Probelength L50 (for CO ₂ only)	Probelength L200
M10	A	16 mm (0.63")	16 mm (0.63")
M11	B	-	35 mm (1.38")

Installed in a duct, a small amount of air flows through the divided probe into the EE850 enclosure, where the CO₂ sensing cell is located, and back into the duct. The T sensing elements are placed inside the probe.

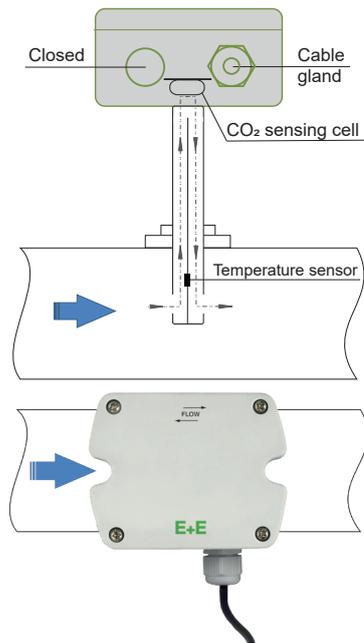


Fig. 1 EE850 measurement principle

NOTICE

False air ingress may lead to measurement inaccuracy and device failures.

For accurate measurement, both the cover of the EE850 and the cable outlet – cable gland or conduit adapter – must be closed tightly. This is essential to avoid ingress of air other than from the duct into the EE850 enclosure, which could falsify the measurement.

i PLEASE NOTE

The airflow direction in the duct must match the arrow direction on the EE850 cover. Depending on the EE850 version, the specified response time only applies in the direction of the blue arrow, in relation to the position of the cable gland.

EE850 with conduit connection for the North American market: use a flat screwdriver to carefully break open the plastic knockout at the marked location, to avoid damaging the electronics inside the enclosure. The conduit adapter is not included in the scope of supply.

5 Electrical Connection

⚠ WARNING

Incorrect installation, wiring or power supply may cause overheating and result in personal injury or property damage.

Cables must not be under voltage during electrical installation and connection or disconnection, especially at terminal connections on circuit boards. For correct cabling, always observe the presented wiring diagram for the product version used.

The manufacturer cannot be held responsible for personal injury or damage to property caused by incorrect handling, installation, wiring, power supply or maintenance of the device.

The EE850 features screw terminals for connecting the power supply and the outputs. The cables are fed into the enclosure through the M16 cable gland.


NOTICE

It is important to ensure that the cable glands are closed tightly for the power supply and outputs cable. This is necessary to assure the IP rating of the enclosure according to EE850 specification, as well as for stress relief at the screw terminals on the EE850 board.


EE850-M10 and EE850-M11




EE850-M10 / voltage output

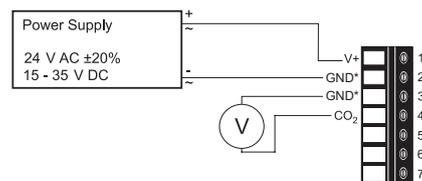

EE850-M10 / current output

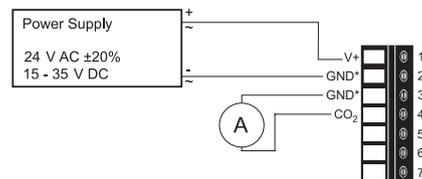


EE850-M11 / voltage output

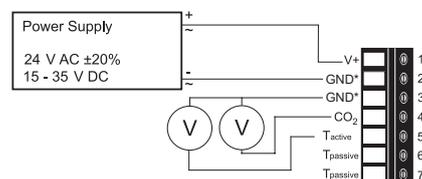

NOTICE

*For failure-free operation and performance according to the specs the supply GND and the measurement GND must be wired separately.

EE850-M1xJ3

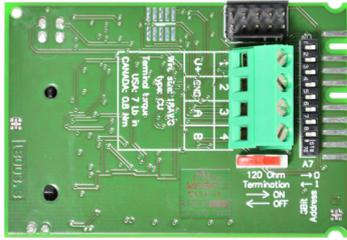

EE850-M1xJ3 / digital output

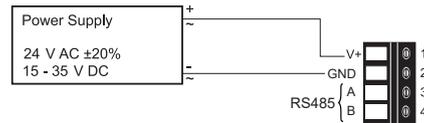


Fig. 2 EE850 connection options

6 Setup and Configuration

The EE850 is ready to use and does not require any further configuration. The factory setup of the EE850 corresponds to the specified order code. Please refer to the datasheet at www.epluse.com/ee850. If needed, the factory setup can be changed. This chapter describes the configuration possibilities with the PCS10 Product Configuration Software and the USB-C configuration stick (HA011070). The CO₂ output signal and output scaling can be changed and CO₂ and T adjustment/calibration can be performed.

6.1 Product Configuration

6.1.1. EE850 Configuration using HA011070

NOTICE

The USB-C configuration stick HA011070 galvanically isolates the USB interface of the PC from the supply voltage of the EE850. When using the USB-C configuration stick the EE850 needs external supply.

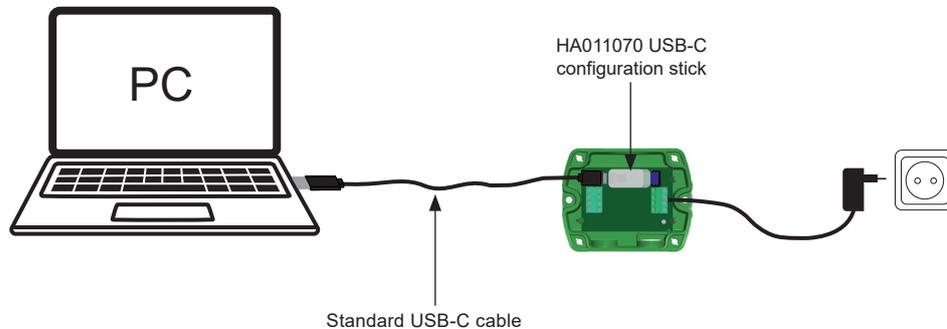


Fig. 3 EE850 configuration using the HA011070 USB-C configuration stick

6.1.2. EE850 Configuration using legacy USB configuration adapter HA011066 (not intended for new designs)

NOTICE

The EE850 may not be connected to any additional power supply when using the USB configuration adapter HA011066.

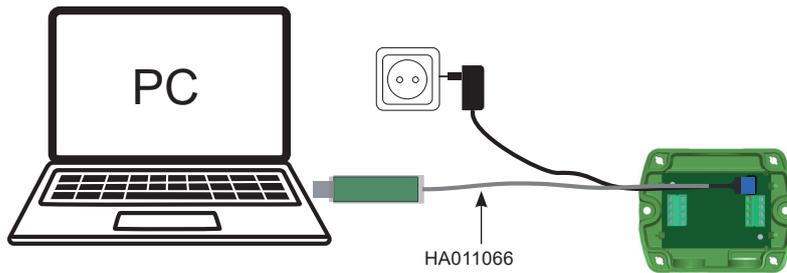


Fig. 4 EE850 connected to a PC running PCS10

Model EE850-M10:

Select the CO₂ output signal:

The output signal can be changed from voltage to current or vice-versa. Set the output signal selection switch to I for current 4 - 20 mA output or to U for voltage 0 - 10 V output. The original CO₂ output range does not change and the calibration data remains valid.

The scaling of the output can be changed by using USB-C configuration stick (HA011070) and Product Configuration Software (PCS10).

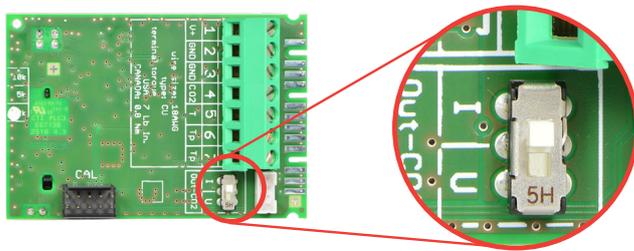


Fig. 5 Model EE850-M10 – Selector switch for the output signal

Example:

Factory setup: voltage output (U), output scale: 0 - 10 V = 0...10 000 ppm.

User setup (after setting the output signal selection switch to I): current output (I), output scale: 4 - 20 mA = 0...10 000 ppm.

Model EE850-M11:

Changing the CO₂ and T output scale:

The scaling of the output can be changed by using USB-C configuration stick (HA011070) and Product Configuration Software (PCS10).

Example:

The output scale after the change

CO ₂	0 - 10 V = 400...8 000 ppm
T	0 - 10 V = 40...100 °F

i PLEASE NOTE

- After changing the factory setup (output signal and/or output scale) the original type number on the EE850 identification label loses its validity; it does not match any longer the device setup.
- The return to factory setup function of PCS10 restores the original adjustment/calibration of the device, but does not affect the user setup for output signal and output scale.

6.2 PCS10 Product Configuration Software

The PCS10 provides a convenient graphical user interface to the EE850 for changing the factory setup via PCS10 and the USB-C configuration stick (HA011070).


To use the software for changes in settings, please proceed as follows:

1. Download the PCS10 Product Configuration Software from www.epluse.com/pcs10 and install it on the PC.
2. Connect the EE850 to the PC using the Modbus configuration adapter.
3. Start the PCS10 software.
4. Follow the instructions on the PCS10 opening page to scan the ports and identify the connected device
5. Click on the desired setup or adjustment mode from the main PCS10 menu on the left. Follow the PCS10 online instructions that are displayed when clicking the “Tutorial” button.
6. Upload changes to the sensor by pressing the “Sync” button.

6.3 RS485 Digital Interface

6.3.1. Hardware Bus Termination

For bus termination EE850 features an internal 120 Ω resistor which can be activated using the slide switch on the electronics board (see also chapter 5 Electrical Connection for details).

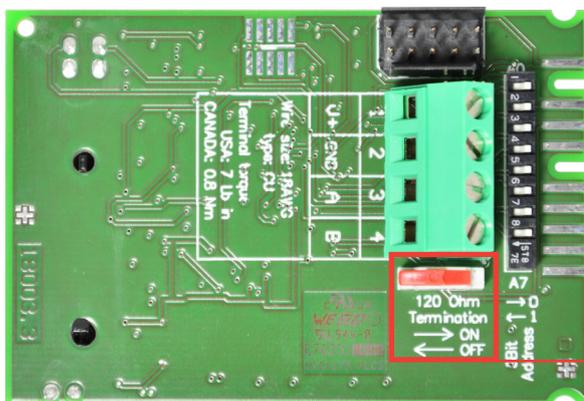

Bus termination resistor 120 Ω (ON-OFF slide switch)


Fig. 6 Model EE850-M1xJ3 – Selector switch for the bus termination

NOTICE

For proper function, the power supply must be strong enough to ensure supply voltage within the specified range (see 9 Technical Data) at any time and at all devices in the bus. This is particularly relevant when using long and thin cables which can cause high voltage drop. Please note that a single digital EE850 requires peak current of 150 mA.

6.3.2. Device Address

 Address Switch



Address setting via PCS10 Product Configuration Software

 
All DIP switches at position 0 → address has to be set via PCS10

Modbus (slave device): factory setting 67 (permitted values: 1...247).

BACnet (master device): factory setting 67 (permitted values: 0...127).

Example: Address is set via configuration software = factory setting.

Address Switch



Address setting via DIP switch

Modbus (slave device): Setting the DIP switches to any other address than 0, overrules the Modbus address set via PCS10 (permitted values: 1...247).

BACnet (master device): Setting the DIP switches to any other address than 0, overrules the BACnet address set via configuration software.

BACnet Note: permitted values are 0...127. The 8th bit of the DIP switches is ignored (ID 127 = 0111 111). To set address 0 via DIP switches, the 8th bit shall be set to 1 (ID 0 = 1000 0000).

Example: Address set to 11 (= 0000 1011 binary).

6.3.3. BACnet Protocol Settings

	Factory settings	Selectable values (via PCS10)
Baud rate	As ordered via order code	9 600, 19 200, 38 400, 57 600, 76 800, 115 200
Data bits	8	8
Parity	None	None
Stop bits	1	1
BACnet address	67	0...127

Tab. 1 BACnet protocol settings

i PLEASE NOTE

- The recommended settings for multiple devices in a BACnet MS/TP network are 38400, 8, None, 1.
- The EE850 represents 1/10 unit load on an RS485 network.

The EE850 PICS (Product Implementation Conformance Statement) is available on the E+E website at www.epluse.com/ee850.

BACnet address and baud rate can be set via:

- PCS10 Product Configuration Software and the USB-C configuration stick HA011070. The PCS10 can be downloaded free of charge from www.epluse.com/pcs10.
- BACnet protocol, see the PICS.

6.3.4. Modbus RTU Protocol Settings

	Factory settings	Selectable values (via PCS10)
Baud rate	As specified in the order code	9 600, 19 200, 38 400, 57 600, 76 800, 115 200
Data bits	8	8
Parity	Even	None, odd, even
Stop bits	1	1, 2
Modbus address	67	1...247

Tab. 2 Modbus RTU protocol settings

i PLEASE NOTE

- The recommended settings for multiple devices in a Modbus RTU network are 9600, 8, even, 1.
- The EE850 represents 1/10 unit load on an RS485 network.

Device address, baud rate, parity and stop bits can be set via:

- PCS10 Product Configuration Software and the USB-C configuration stick HA011070.
The PCS10 can be downloaded free of charge from www.epluse.com/pcs10.
- Modbus protocol in the register 1 (0x00) and 2 (0x01).
See Application Note Modbus AN0103 (available at www.epluse.com/ee850).

The serial number as ASCII-code is located in read-only registers 1 - 8 (0x00 - 0x07).

The firmware version is located in register 9 (0x08) (bit 15...8 = major release; bit 7...0 = minor release).

The sensor name as ASCII-code is located in read-only registers 10 - 17 (0x09 - 0x11).

NOTICE

When reading information that spans multiple registers, it is always necessary to read all registers, even if the desired information requires less.

NOTICE

To obtain the correct floating point values, both registers have to be read within the same read cycle. The measured value may change between two Modbus requests. This can cause inconsistencies in the exponent and mantissa.

i INFO

The Modbus function codes mentioned throughout this document shall be used as described in chapter 6 of the [MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1b3](https://www.modbus.org/modbus-specifications), available at the Modbus Organisation's Technical Resources site <https://www.modbus.org/modbus-specifications>.

Communication settings (INT16)

Parameter	Register number ¹⁾ [Dec]	Register address ²⁾ [Hex]	Size ³⁾
Write register: function code 0x06			
Modbus address ⁴⁾	1	00	1
Modbus protocol settings ⁴⁾	2	01	1

Device information (INT16)

Parameter	Register number ¹⁾ [Dec]	Register address ²⁾ [Hex]	Size ³⁾
Read register: function code 0x03 / 0x04			
Serial number (as ASCII)	1	00	8
Firmware version	9	08	1
Sensor name	10	09	8

1) Register number (decimal) starts from 1.

2) Register address (hexadecimal) starts from 0.

3) Number of registers.

4) For Modbus address and protocol settings see Application Note Modbus AN0103 (available at www.epluse.com/ee850).

Tab. 3 EE850 registers for device setup

6.4 Modbus Register Map

The measured data is saved as 32 bit floating point values (data type FLOAT32) and as 16 bit signed integer values (data type INT16).

FLOAT32

Parameter	Unit	Register number ¹⁾ [DEC]	Register address ²⁾ [HEX]
Read register: function code 0x03 / 0x04			
Temperature	°C	1003	3EA
	°F	1005	3EC
CO ₂ (average)	ppm	1061	424
CO ₂ (raw)	ppm	1063	426

INT16

Parameter	Unit	Scale ³⁾	Register number ¹⁾ [DEC]	Register address ²⁾ [HEX]
Read register: function code 0x03 / 0x04				
Temperature	°C	100	4002	FA1
	°F	50	4003	FA2
CO ₂ (average)	ppm	1	4031	FBE
CO ₂ (raw)	ppm	1	4032	FBF

1) Register number (decimal) starts from 1.

2) Register address (hexadecimal) starts from 0.

3) Examples for factory scaling of stored value

100	is the scale 1:100	(e.g. 2550 is equivalent to 25.5 °C)
50	is the scale 1:50	(e.g.: 2550 is equivalent to 51 °F)
10	is the scale 1:10	(e.g.: 135 is equivalent to 13.5 mbar)
1	is the scale 1:1	(e.g.: 800 is equivalent to 800 ppm)

Tab. 4 EE850 FLOAT32 and INT16 measured data registers


6.5 Modbus RTU Example

The EE850's Modbus address is 67 [0x43].

Please refer to

- Chapter 6 of the [MODBUS APPLICATION PROTOCOL SPECIFICATION V1.1b3](#), available at the Modbus Organisation's Technical Resources site <https://www.modbus.org/modbus-specifications>.
- E+E Application Note Modbus AN0103 (available at www.epluse.com/ee850)

Read the CO₂ concentration (FLOAT32) CO₂ = 1288.34375 ppm from the register 0x424:

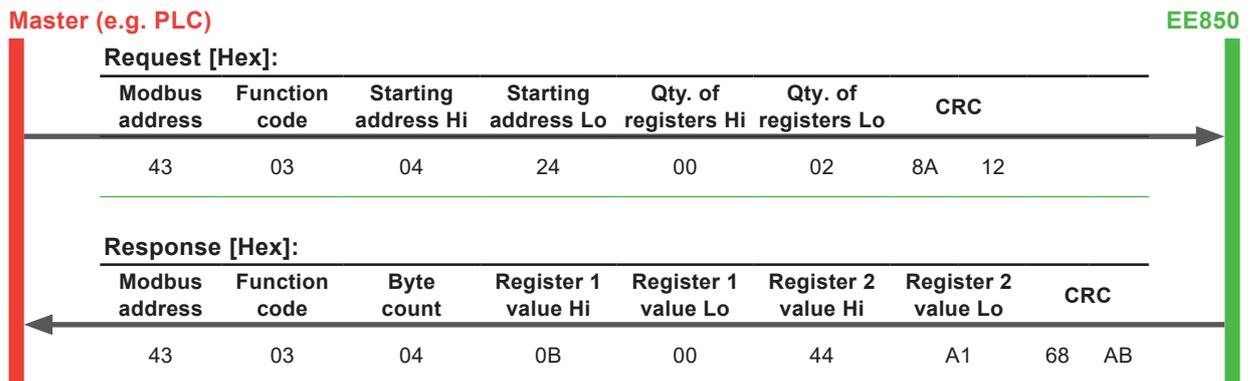

Tab. 5 Example temperature query

Decoding of floating point values:

Floating point values are stored according to IEEE754. The byte pairs 1, 2 and 3, 4 are transformed as follows (numbers taken from CO₂ reading Modbus request/response example above):

Modbus response [Hex]

Byte 3 (Register 1 - Hi)	Byte 4 (Register 1 - Lo)	Byte 1 (Register 2 - Hi)	Byte 2 (Register 2 - Lo)
0B	00	44	A1
MMMM MMMM	MMMM MMMM	SEEE EEEE	EMMM MMMM

Tab. 6 Modbus response

IEEE754

Byte 1	Byte 2	Byte 3	Byte 4
44	A1	0B	00
0100 0100	1010 0001	0000 1011	0000 0000
SEEE EEEE	EMMM MMMM	MMMM MMMM	MMMM MMMM
Decimal value: 1288.34375			

Tab. 7 Data representation according to IEEE754

7 Maintenance and Service

7.1 Calibration and Adjustment

The EE850 can be calibrated / adjusted with the help of the PCS10. For this purpose, the sensor needs to be connected to a PC via the USB-C configuration stick (HA011070) and a standard USB-C cable.

7.1.1. Definitions

- **Calibration** documents the accuracy of a measurement device. The device under test (specimen) is compared with the reference and the deviations are documented in a calibration certificate. During the calibration, the specimen is not changed or improved in any way.
- **Adjustment** improves the measurement accuracy of a device. The specimen is compared with the reference and brought in line with it. An adjustment can be followed by a calibration which documents the accuracy of the adjusted specimen.

7.1.2. CO₂ and T Calibration and Adjustment

Depending on the application and the requirements of certain industries, there might arise the need for periodical CO₂ and temperature calibration or adjustment.

7.1.3. Calibration and Adjustment at E+E Elektronik

Calibration and / or adjustment can be performed in the E+E Elektronik calibration laboratory. For information on the E+E capabilities in ISO or accredited calibration please see www.eplusecal.com.

7.1.4. Calibration and Adjustment by the User

Perform offset and 1- or 2-point adjustment via the PCS10 Product Configuration Software (see below).

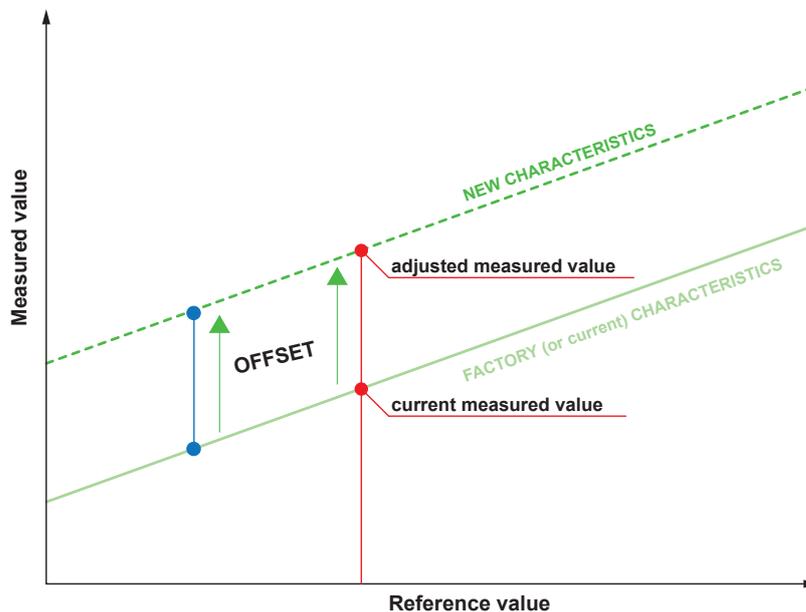


Fig. 7 Offset adjustment

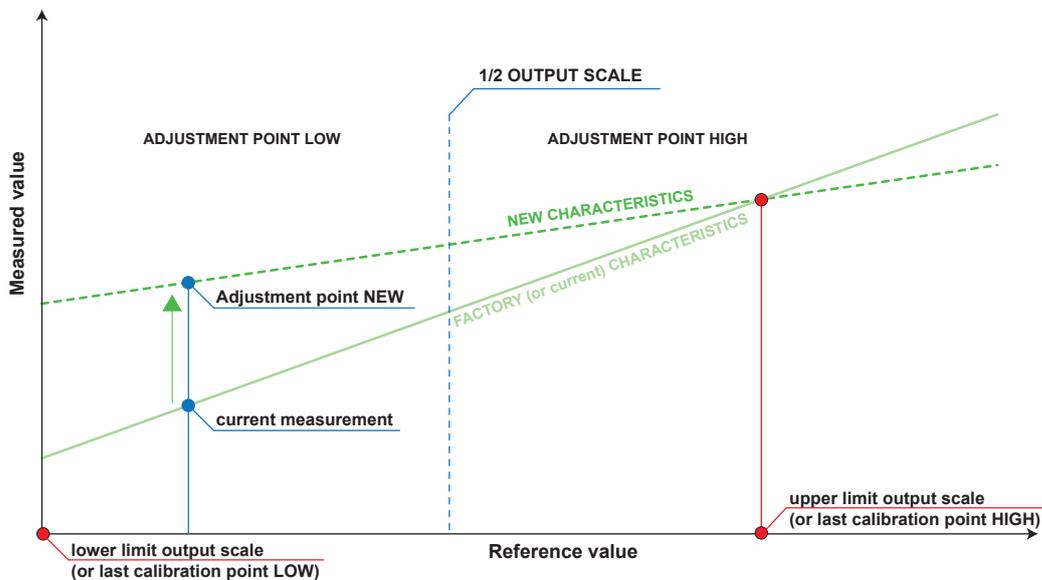


Fig. 8 1- or 2-point adjustment

7.2 Repairs

i PLEASE NOTE

Repairs may only be carried out by the manufacturer. The attempt of unauthorised repair excludes any warranty claims.

8 Accessories

For further information see datasheet "[Accessories](#)".

Accessories	Code
USB-C configuration stick	HA011070
E+E Product configuration software (Free download: www.epluse.com/pcs10)	PCS10
Power supply adapter 24 V DC	V03

9 Technical Data

Measurands

CO₂

Measurement principle	Dual wavelength non-dispersive infrared technology (NDIR)
Measuring range	0...2 000 / 10 000 ppm
Accuracy @ 25 °C (77 °F) and 1 013 mbar (14.7 psi) 0...2 000 ppm 0...10 000 ppm	< ±(50 ppm +2 % of measured value) < ±(100 ppm +5 % of measured value)
Temperature dependency , typ. in the range of -20...+45 °C (-4...+113 °F)	±(1+ CO ₂ concentration [ppm] / 1 000) ppm/°C ± 0.556 * (1+ CO ₂ concentration [ppm] / 1 000) ppm/°F
Response time t ₆₃ , typ.	<100 s at 3 m/s (590 ft/min) air speed in the duct
Measuring interval	Approx. 15 s
Calibration interval Recommended under normal operating conditions in building automation.	>5 years

Temperature (T)

Measuring range	-20...+60 °C (-4...+140 °F)
Accuracy @ 20 °C (68 °F)	±0.3 °C (±0.5 °F)
Response time t ₆₃	<50 s

Outputs

Analogue

T: according to ordering guide	0 - 10 V	-1 mA < I _L < 1 mA	I _L = load current
CO₂ 0...2 000 / 10 000 ppm	0 - 10 V 4 - 20 mA	-1 mA < I _L < 1 mA R _L < 500 Ω	R _L = load resistance

T sensor passive

2-wire-connection	T sensor type according to order code, see ordering guide
Wire resistance (terminal - sensor) , typ.	0.4 Ω

Digital

Digital Interface	RS485 (EE850 = 1/10 unit load)
Protocol Factory settings Supported Baud rates Measured data types	Modbus RTU 9 600 Baud, parity even, 1 stop bit, Modbus address 67 9 600, 19 200 und 38 400 FLOAT32 and INT16
Protocol Factory settings Supported Baud rates	BACnet MS/TP BACnet address 67 9 600, 19 200, 38 400, 57 600, 76 800 und 115 200

General

Power supply class III  USA & Canada: Class 2 supply necessary, max. voltage 30 V DC	24 V AC $\pm 20\%$ 15 - 35 V DC
Current consumption , typ.	15 mA + output current
Peak current , max..	350 mA for 0.3 s (analogue output) 150 mA for 0.3 s (RS485 interface)
Minimum air speed in the duct , min.	1 m/s (196 ft/min)
Electrical connection	Screw terminals max. 2.5 mm ² (AWG 14)
Cable gland	M16x1.5
Working and storage conditions	-20...+60 °C (-4...+140 °F) 0...95 %RH, non-condensing
Enclosure material	Polycarbonate (PC), UL94 V-0 approved
Protection rating Enclosure Probe	IP65 / NEMA 4X IP20
Electromagnetic compatibility	EN 61326-1 EN 61326-2-3 Industrial environment FCC Part15 Class B ICES-003 Class B
Conformity	EN 45545-2 (HL3)  
Configuration and adjustment	PCS10 Product Configuration Software (free download) and USB-C configuration stick

10 Conformity

10.1 Declarations of Conformity

E+E Elektronik Ges.m.b.H. hereby declares that the product complies with the respective regulations listed below:



European directives and standards.

and



UK statutory instruments and designated standards.

Please refer to the product page at www.epluse.com/ee850 for the Declarations of Conformity.

10.2 Electromagnetic Compatibility

EMC for industrial environment.

The sensor is a group 1 devices and correspond to class B.

10.3 FCC Part 15 Compliance Statement


This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which thereceiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

10.4 ICES-003 Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

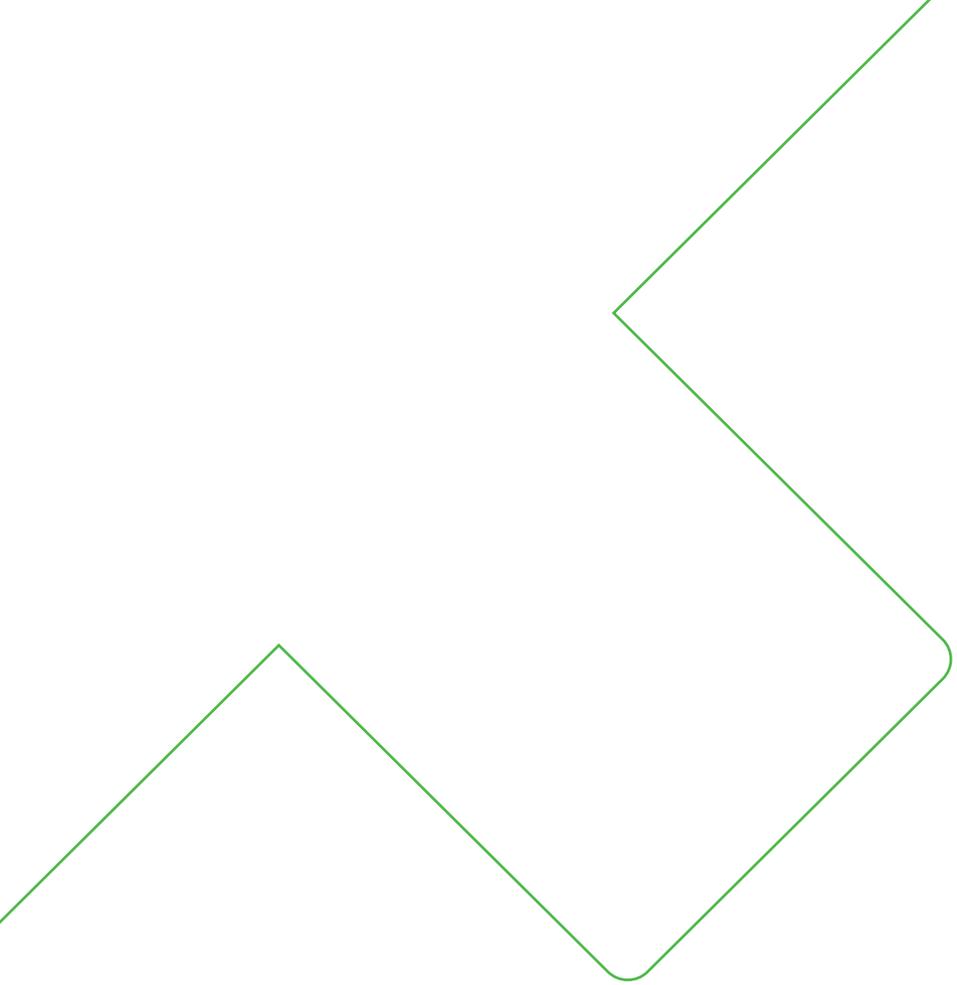

Company Headquarters &
Production Site

E+E Elektronik Ges.m.b.H.
Langwiesen 7
4209 Engerwitzdorf | Austria
T +43 7235 605-0
F +43 7235 605-8
info@epluse.com
www.epluse.com

Subsidiaries

E+E Sensor Technology (Shanghai) Co., Ltd.
T +86 21 6117 6129
info@epluse.cn

E+E Elektronik France SARL
T +33 4 74 72 35 82
info.fr@epluse.com

E+E Elektronik Deutschland GmbH
T +49 6171 69411-0
info.de@epluse.com

E+E Elektronik India Private Limited
T +91 990 440 5400
info.in@epluse.com

E+E Elektronik Italia S.r.l.
T +39 02 2707 86 36
info.it@epluse.com

E+E Elektronik Korea Ltd.
T +82 31 732 6050
info.kr@epluse.com

E+E Elektronik Corporation
T +1 847 490 0520
info.us@epluse.com



—
your partner
in sensor
technology.